

LUGGAGE LOCATOR

Instructions for Use



Introduction

This Luggage Locator can help you find your luggage much more efficiently. Simply attach the receiver to your luggage and press the button on the remote, you can locate your baggage from up to 80ft away with bright long-lasting LED flashes and beep sound.

Product Diagram




Battery Installation

Follow the steps below to install batteries into the transmitter and receiver.

A. Transmitter


1. Remove the battery door located on the back of the transmitter.
2. Install the battery according to the (+) and (-) marks inside the battery compartment.
3. Push the battery door back into place.

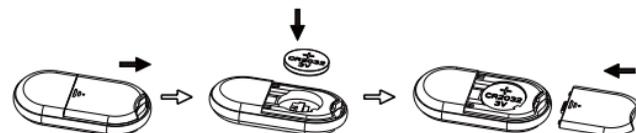

B. Receiver

1. Use a small coin, insert in the slot on the battery cover and unscrew it in the arrowed direction.
2. Put the battery into the battery compartment, make sure the "+" side of the battery is facing up.
3. Replace the battery cover and securely screw it into place.

Tips: Please take out the batteries if you would not use the unit for an extended lifespan.

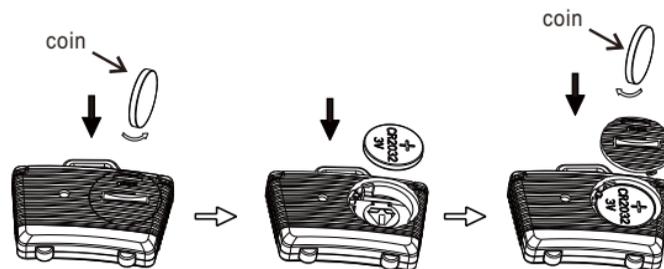

Alarm Modes

The receiver has two alarm modes to locate the luggage, one is light only mode, the other is light and sound mode. The default mode is light only.

Quickly press the button on receiver for 2 times to switch between the two modes.

Tips: Sound mode is not suggested in the airport to avoid unexpected security troubles caused by the noise.

How to Use?

1. Attach the receiver to luggage with strap provided.
2. To locate luggage, press button(s) on remote. Receiver will blink and beep (if the sound mode is on) for 3 minutes, then stay on standby mode.
If luggage is not found in 3 minutes, press the button again.
3. When luggage is found, press the button on receiver to stop the blinking light and beep sound (if the sound mode is on).

Specification

- Battery for transmitter: CR2032 (included)
- Battery for receivers: CR2032 (included)
- Working range: 25~40 meters (open space)
- Sound: 75~80dB
- Frequency: 433.92MHz